


ASSEMBLY INSTRUCTION

ITEM No.:T90WT

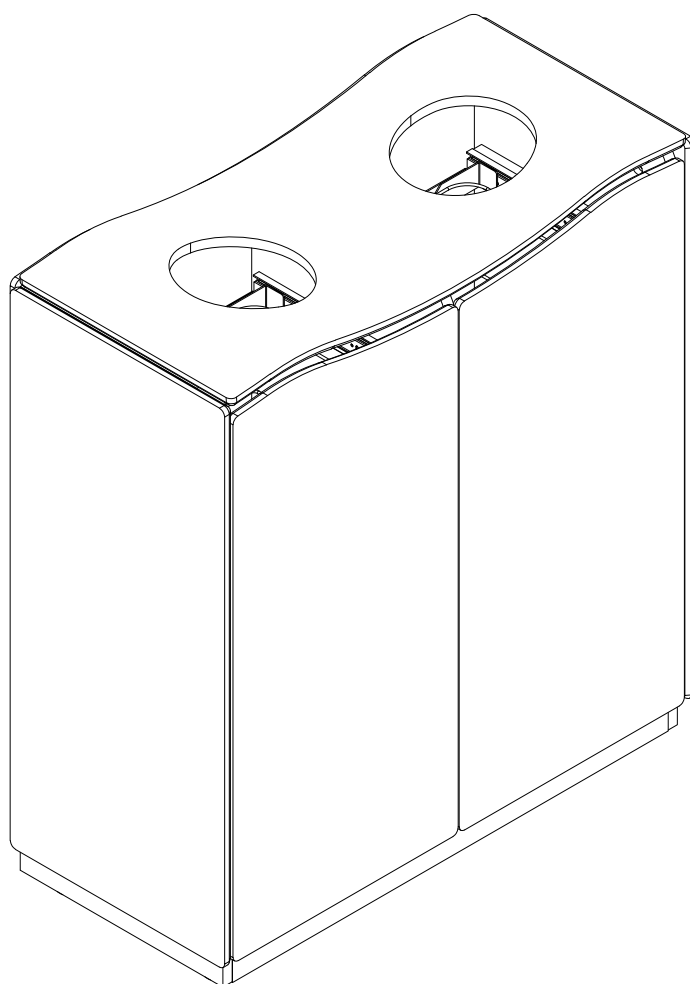


PARTS LIST

ITEM	DESCRIPTION	QTY.	ITEM	DESCRIPTION	QTY.
A	Top panel	1	(a)	Wrench	1
X	Left side panel	1	(b3)	6*20 Fix Bolt	18
X1	Left side panel	1	(L)	Lock & Plate	2
Z	Right side panel	1	(g1)	Hinge Stand	6
Z1	Right side panel	1	(c1)	6*30 Cam Bolt	28
D	Back panel	1	(d1)	8*30 Dowel pin	16
D1	Back panel	1	(s1)	3.5*14 Screw	30
Y	Partition Panel	1	(s2)	4*16 Screw	36
V1	Door Panel	1	(t1)	Adjustable feet	4
V2	Door Panel	1			
G	Bottom	1			



(c1) 6*30 Cam Bolt-28



(g1) Hinge Stand-6




(d1) 8*30 Dowel Pin-16



(c2) (5/8") Cam Cover-18




(s1) 3.5*14 Screw -30



(t1) Adjustable feet- 4




(p) Hook-4

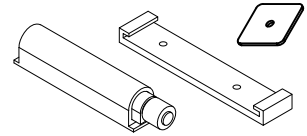


(L) Lock-2

Pre-installed parts



(c5) Cam

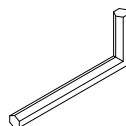

(a) Wrench-1




(b3) 6*20 Fix Bolt-18



(s2) 4*16 Screw -36


STEP 1

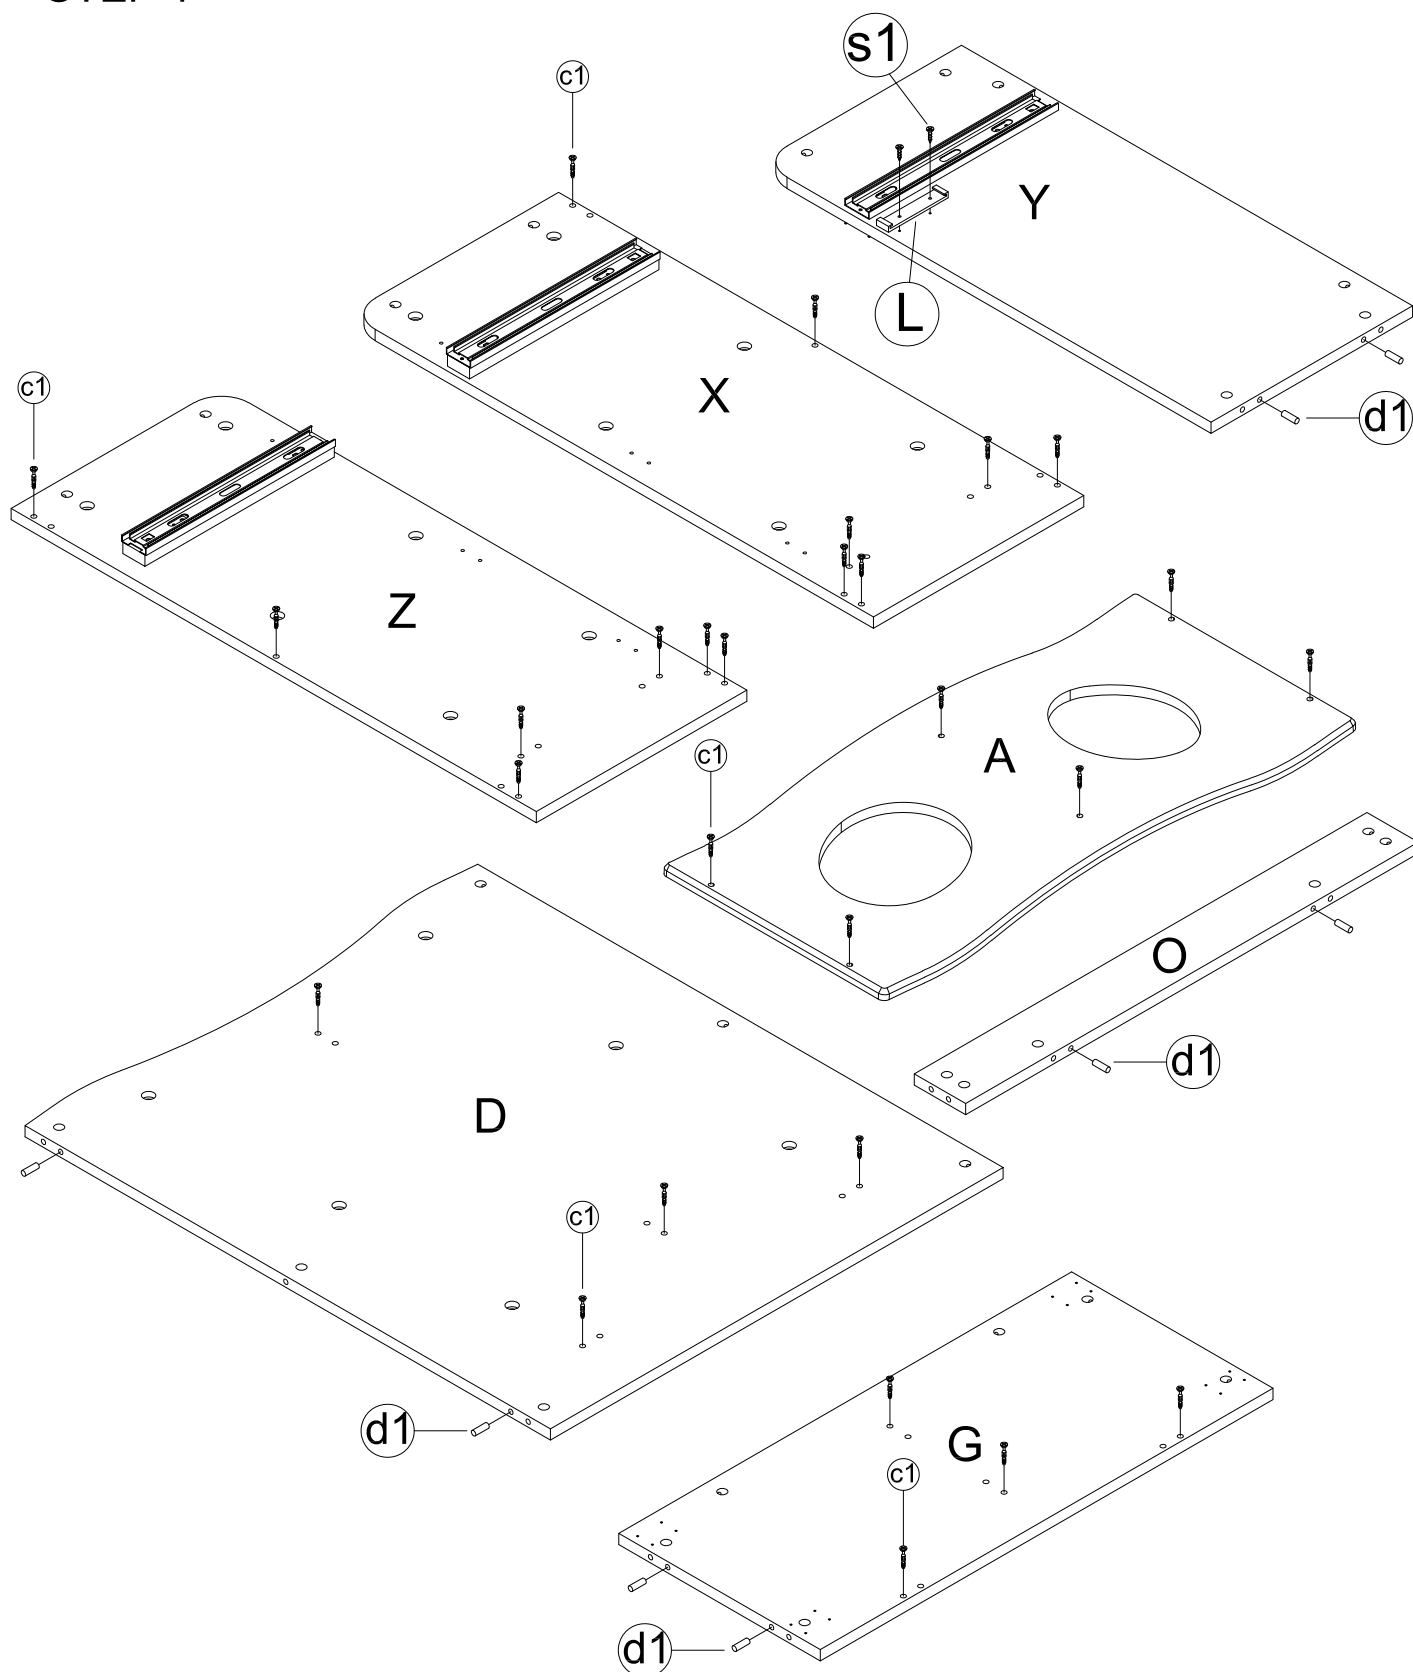

Preparation for panel D,X,Z,Y,G,A,O

1、 Insert cams bolts (c1) and dowel pins (d1) into panels D,X,Z,G,A,O and Y as illustrated above.


STEP 2

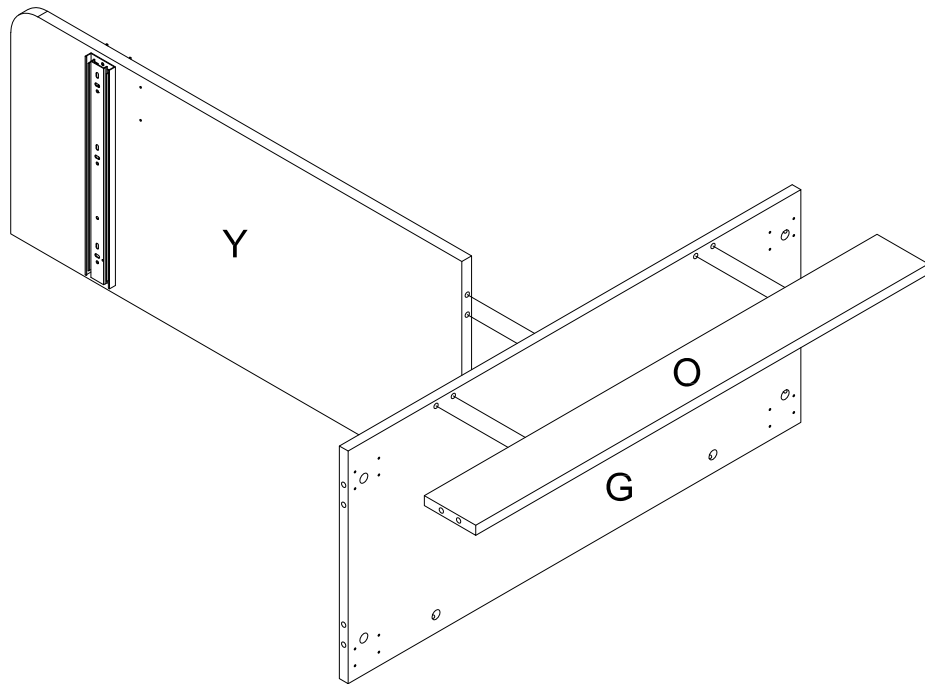

Panel Y.O and G assembly.

- 1.Insert cam bolts on panel G into cams on panels O.Y and tighten in a clockwise direction as illustrated above.


STEP 3

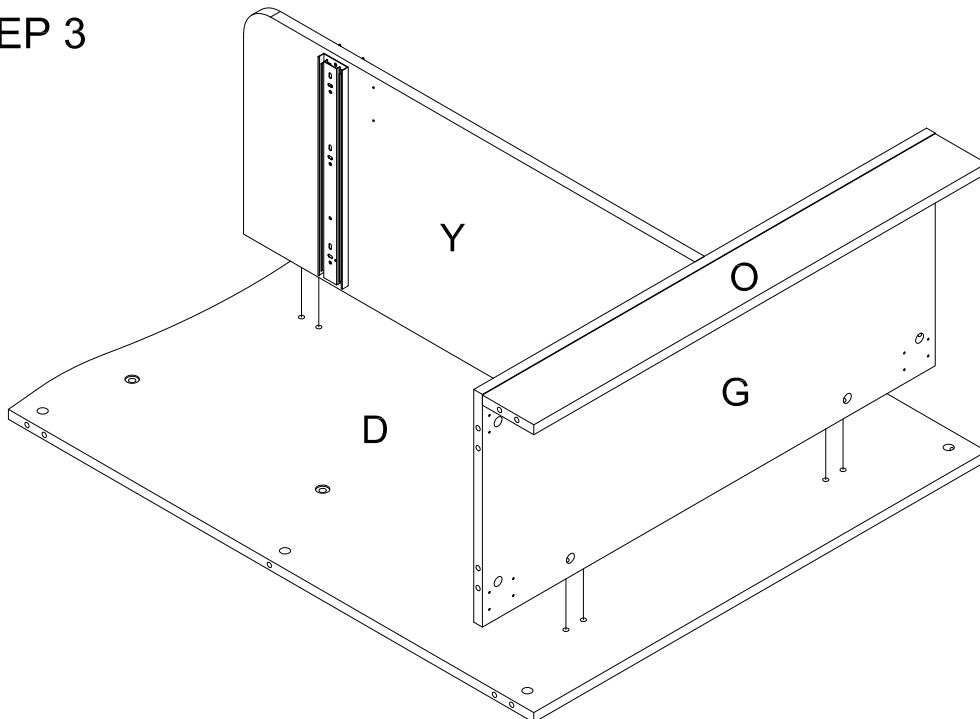

Panel D assembly.

- 1.Insert cam bolts on panel D into cams on panels G.Y and tighten in a clockwise direction as illustrated above.


STEP 4

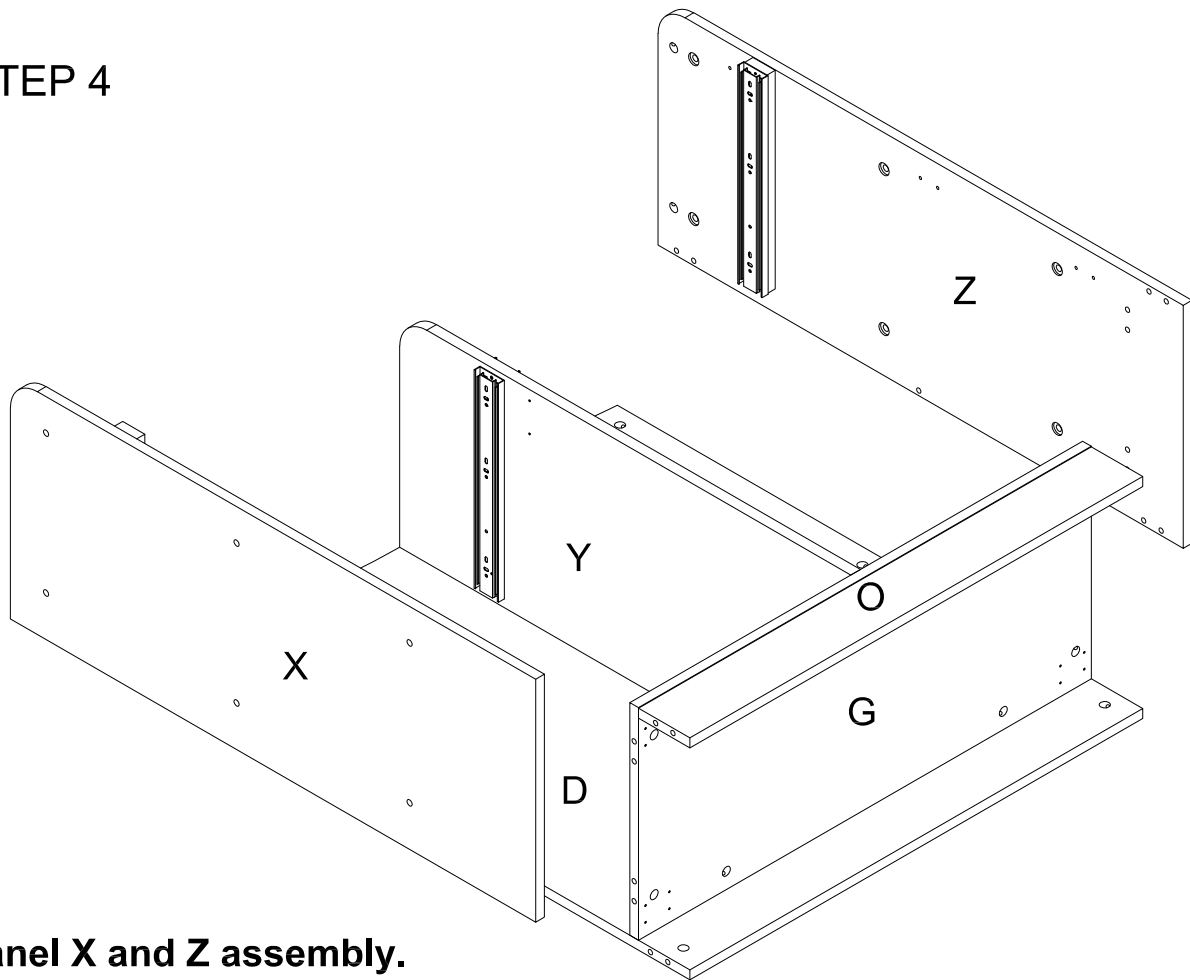

Panel X and Z assembly.


1. Insert cam bolts on panel X.Z into cams on panels D.G.O and tighten in a clockwise direction as illustrated above.

STEP 5

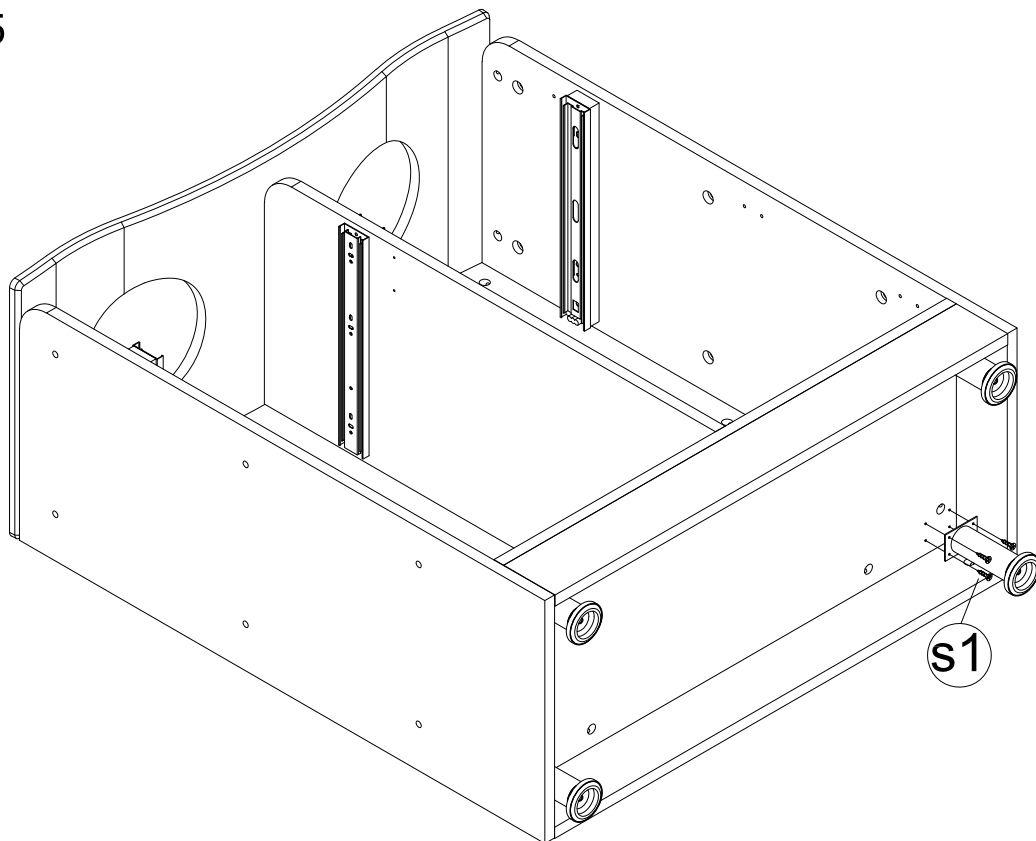

1. Insert Screw s1 and Adjustable feet into panels G as illustrated above.


STEP 6

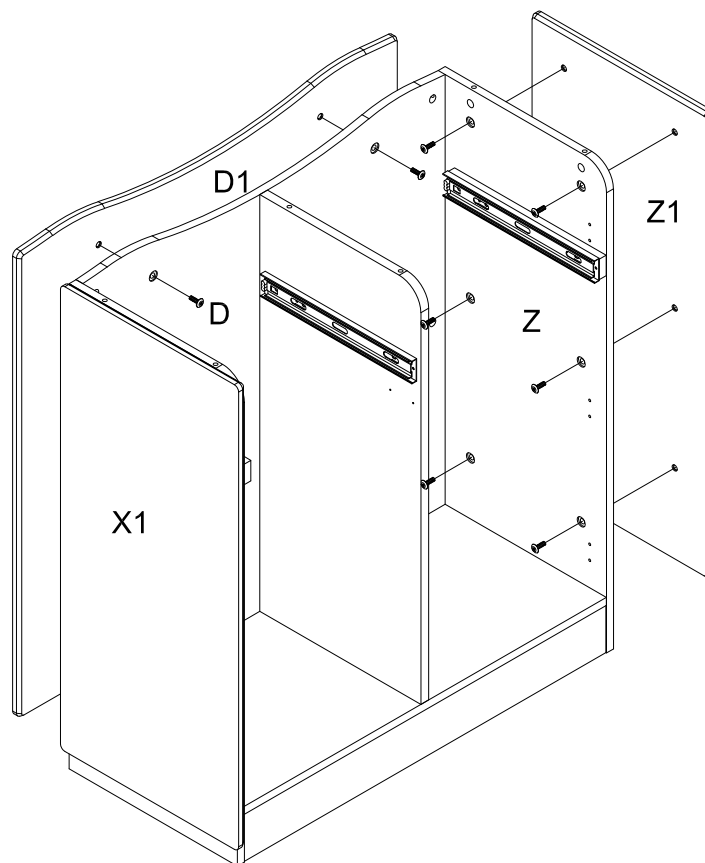

Panel X1.Z1.D1 assembly.

1. Fix bolts to connect Panels X.Z.D into panels X1.D1.Z1 as illustrated above.


STEP 7

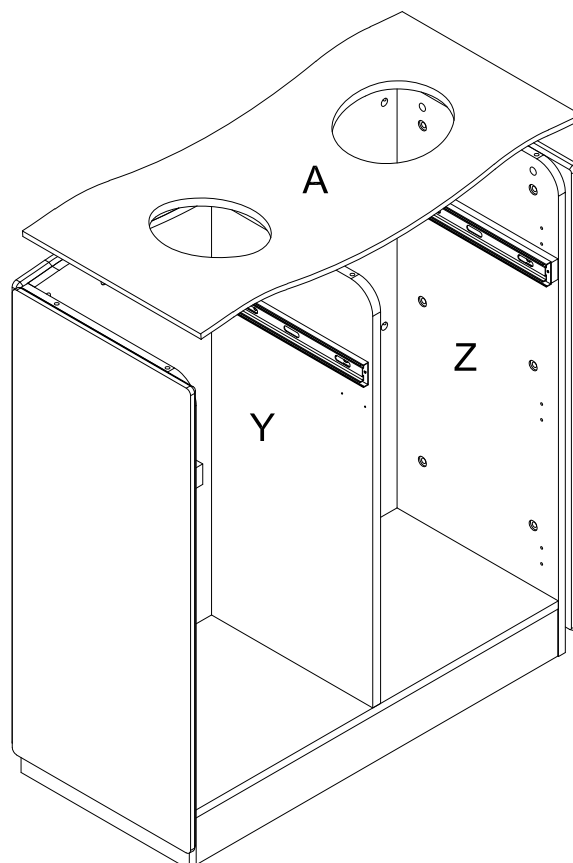




Panel A assembly.

1. Insert cam bolts on panel A into cams on panels X.Z.Y and tighten in a clockwise direction as illustrated above.


STEP 7

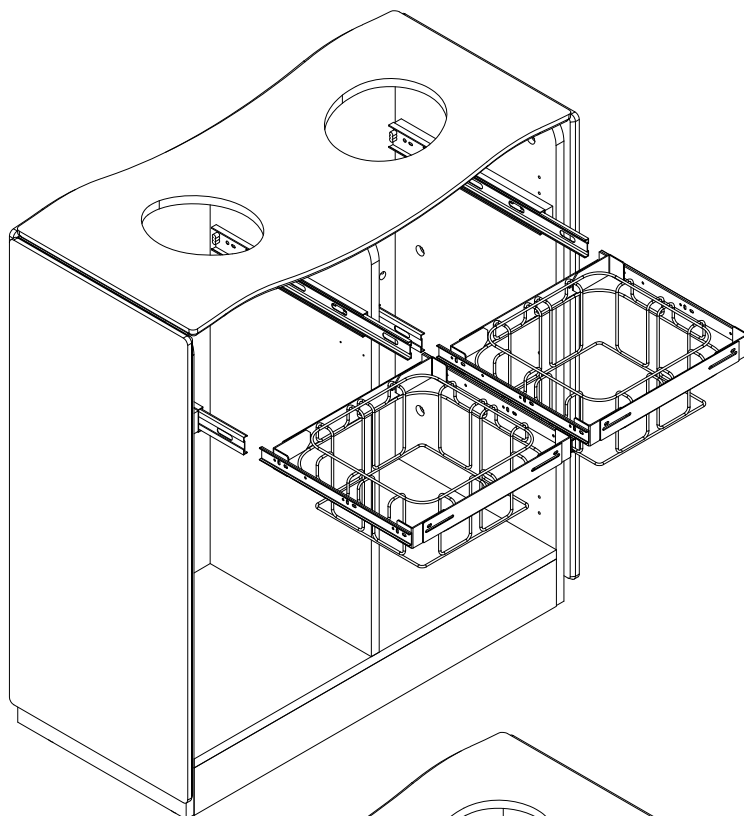


STEP 8

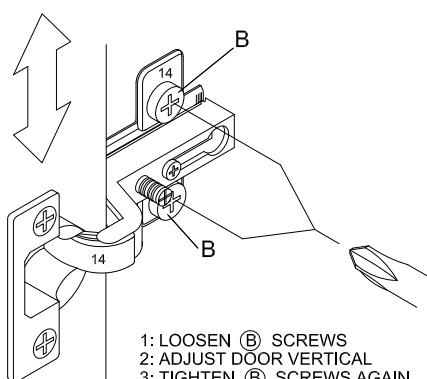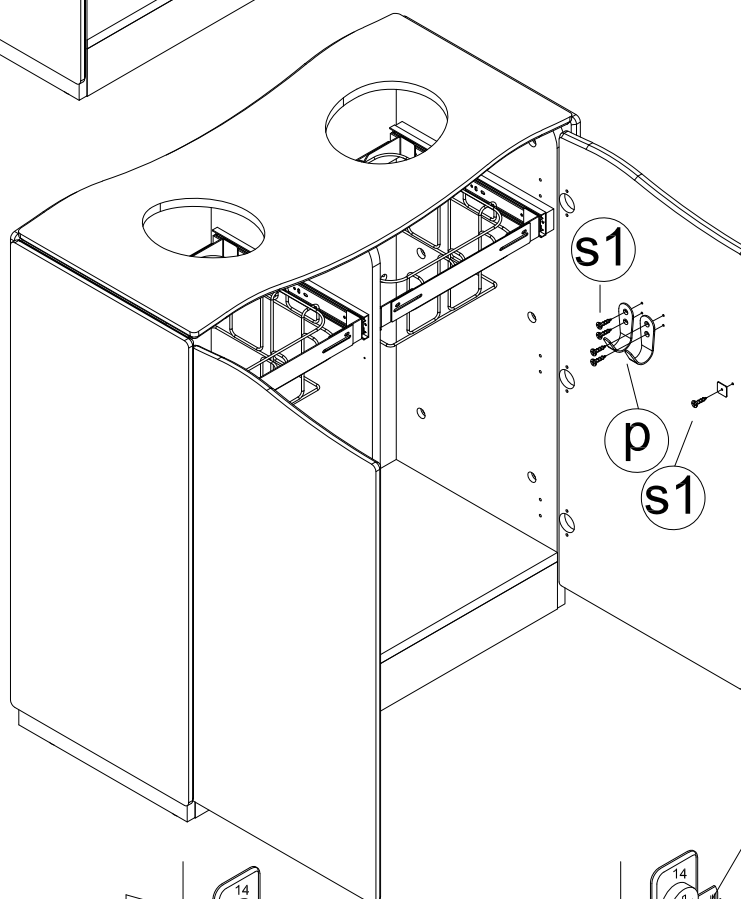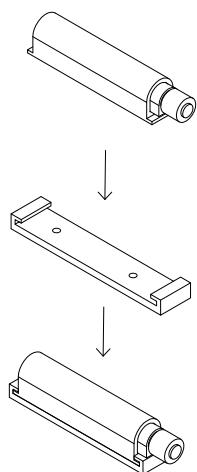

- 1: LOOSEN (B) SCREWS
- 2: ADJUST DOOR VERTICAL
- 3: TIGHTEN (B) SCREWS AGAIN

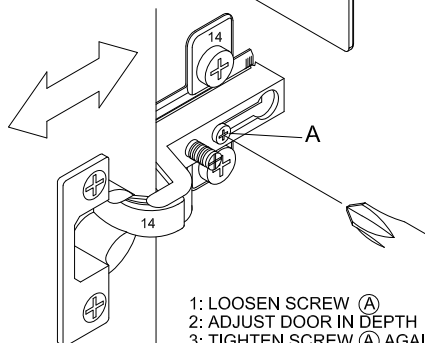


- 1: LOOSEN SCREW (A)
- 2: ADJUST DOOR IN DEPTH
- 3: TIGHTEN SCREW (A) AGAIN

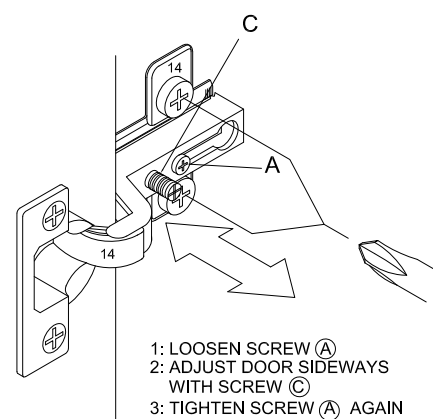

- 1: LOOSEN SCREW (A)
- 2: ADJUST DOOR SIDWAYS WITH SCREW (C)
- 3: TIGHTEN SCREW (A) AGAIN

You have now successfully completed the assembly on item:

ITEM No.:CV90WT

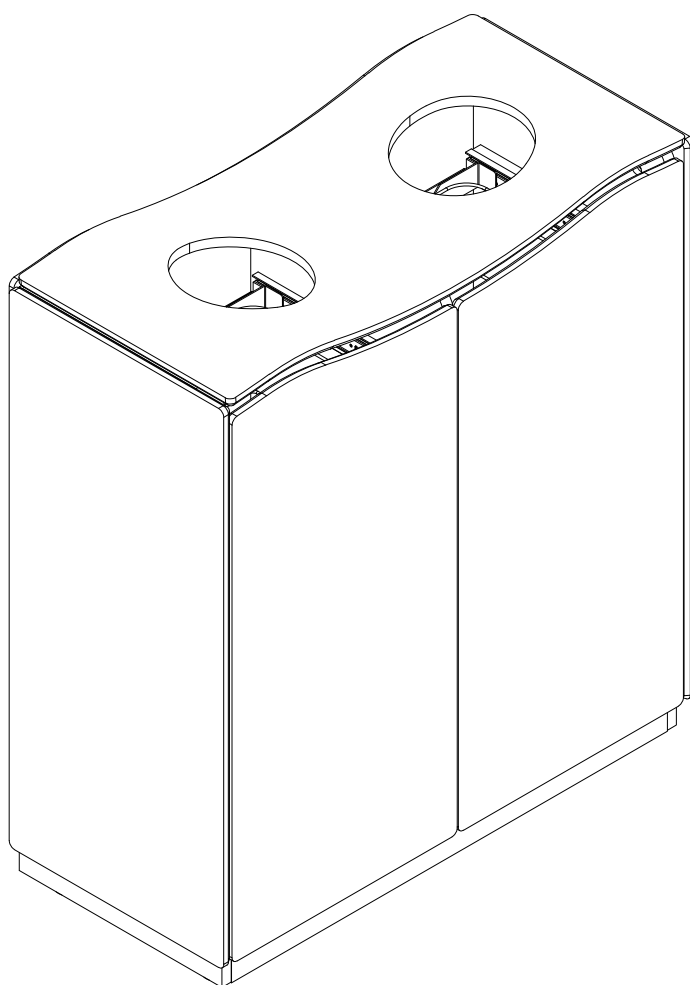

Remove all QC and panel labels and wipe clean using a damp cloth and general household cleaner .